

BST-860S

Battery System Tester

USER'S MANUAL



LAUNCH
www.cnlaunch.com

NOTE

- Carefully read the user manual before using, and keep it well for future reference.
- Carefully check the device parts list before using. For any doubt, contact Launch distributor immediately.
- Due to the product upgrade, tiny difference between the user manual and the device will not be further noticed. Take the device as standard.

Copyright Information

Copyright reserved! Without written agreement from Launch Tech Co., Ltd (Hereinafter refer to "Launch"), any company or person is not allowed to copy and duplicate this user manual in any format (electronic, mechanical, video, record or other formats).The user manual is designed only for Launch products. Any consequence caused by using the user manual to guide other device operation is not under the responsibility of Launch.

Launch and its branches are not responsible for the fees and expense of the device damage and loss due to private accident or from third party, misuse and abuse of the device, unauthorized change and repair, or any operation and maintenance not following Launch standard.

Launch is not responsible for device damage or problem due to the usage of any optional parts or consumables instead of Launch original products or Launch recognized products.

Declaration: Other product names mentioned in the user manual are aimed to describe the device usage. The registered trademarks still belong to the original company.

The device is for professional technicians or maintenance and repair personnel.

Registered Trademark

Launch has registered its trademark in China and several other countries, logo is **LAUNCH**. Other Launch trademarks, service marks, dot names, icons, company names mentioned in the user manual all belong to Launch and its subsidiaries. In those countries where Launch trademark, service mark, dot name, icon, company name not registered yet, Launch disclaim the right for its unregistered trademark, service mark, dot name, icon, and company name. Trademarks of the other products and company names mentioned in the user manual still belong to original registered company. Without written agreement from the owner, no person is allowed to use the trademark, service mark, dot name, icon and company name of Launch or of other mentioned companies. You can visit <http://www.cnlaunch.com> or write to Customer Service Center of LAUNCH TECH CO., LTD at Launch Industrial Park, North of Wuhe Avenue, Banxuegang, Longgang District, Shenzhen, P.R.China, to get contact with Launch for the written agreement on the usage of the User Manual.

Content

- CHAPTER 1 PRODUCT SUMMARY 1**
 - 1.1 Product Profile 1
 - 1.2 Product Function 1
 - 1.3 Technical Parameter 2
 - 1.4 Working Environment Requirement 3
- CHAPTER 2 TESTER STRUCTURE 4**
- CHAPTER 3 OPERATION 5**
 - 3.1 Battery Test5
 - 3.1.1 QR Code6
 - 3.2 Cranking Test 6
 - 3.3 Charging Test 7
 - 3.3.1 Charging Test Result 8
 - 3.4 Set up9
 - 3.4.1 View Historical Data 9
 - 3.4.2 Export Data9
 - 3.4.3 Print Data9
 - 3.4.4 Delete Data.....10
 - 3.4.5 Select Language.....10
 - 3.4.6 Time Adjustment.....10
 - 3.5 QC Test.....10
- CHAPTER 4 WARRANTY CLAUSE 11**

Chapter 1 Product Summary

1.1 Product Profile

BST-860S Battery Tester adopts currently the world's most advanced conductance testing technology to easily, quickly and accurately measure the actual cold cranking amps capability of the vehicle starting battery, healthy state of the battery itself, and common fault of the vehicle starting system and charging system, which can help maintenance personnel to find the problem quickly and accurately, thus to achieve quick vehicle repair.

1. Test all automotive cranking lead acid battery, including ordinary lead acid battery, AGM flat plate battery, AGM spiral battery, Gel battery, and 12V Lithium battery etc.
2. Directly detect bad cell battery.
3. Polarity reverse connection protection, reverse connection will not damage the tester or affect the vehicle and battery.
4. Directly test the battery with loss of electricity, no need to full charge before testing.
5. Testing standards include currently the world's majority of battery standards, CCA, BCI, CA, MCA, JIS, DIN, IEC, EN, SAE, GB.
6. Support multi-languages:
European version: English, German, Italian, French, Polish, Russian, Swedish, Turkish, Slovak, Hungarian.
Asian version: English, Spanish, Portuguese, French, Traditional Chinese, Simplified Chinese, Japanese, Korean, Romania, Bulgaria.
Other languages can also be customized according to user's need.

1.2 Product Function

Main functions of BST-860S battery tester include: battery test, cranking test, charging test and other additional functions.

Battery test is mainly targeted to analyze the battery healthy status to calculate the actual cold cranking capability of the battery and the aging extent, which provide reliable analysis

evidence for the test and maintenance of the battery. It notifies the user to replace battery in advance when the battery getting aged.

Cranking test is mainly to test and analyze the starting motor. Through testing the actual required cranking current and cranking voltage of the starting motor, it can find out whether the starting motor works fine. There are several reasons why the starting motor is abnormal: lubricating system fault causing the starting loaded torque increasing or rotor friction of the starting motor causing the increasing friction of the starting motor itself.

Charging test is to check and analyze the charging system, including generator, rectifier, rectifier diode, etc., thus to find out whether the output voltage of the generator is normal, the rectifier diode works fine and the charging current is normal. Suppose one of the above mentioned parts is not in normal situation, it will lead to over charge or incomplete charge of the battery, thus the battery will be quickly damaged and also greatly shorten the using life of other loaded electrical appliance.

Additional functions include:

View historical data, export data ,print data,delete data, select language,time adjustment, QC test.

1.3 Technical Parameter:

1、 Cold Cranking Amps Measure Range:

Measure Standard	Measure Range
CCA	40-3000
BCI	40-3000
CA	40-3000
MCA	40-3000
JIS	26A17--YTZ6
DIN	40-2000
IEC	40-2000
EN	40-3000
SAE	40-3000
GB	3-360Ah

2、 Voltage Measure Range: 7-30VDC.

1.4 Working Environment Requirement

Working Environment Temp.: -18°C-60°C

It is applicable for automotive manufacturers, automotive maintenance and repair workshops, automotive battery factories, automotive battery distributors, and educational organizations, etc.





Chapter 2 Tester Structure

BST-860S mainly consists of battery tester main unit, testing cables.

BST-860S Battery Tester main unit cover is made of ABS acid-resistant plastic.



Key Description

-  Up and Down keys
Select upwards or downwards via white UP and DOWN keys.
-  Return key
Return to previous menu via RETURN key.
-  OK key
Confirm the selection via OK key
-  QC test key
Fast testing via this key.



Chapter 3 Operation

Connect the red test clamp with battery anode and the black one with cathode, the tester will power on automatically. Voltage battery below 7.0VDC can't be tested properly, then press OK key to continue.

According to the tester, you can press UP/DOWN key to choose:

- ① Battery Test
- ② Cranking Test
- ③ Charging Test
- ④ Set up
- ⑤ QC Test


3.1 Battery Test

After entering battery test program, tester displays the tester model and time .



Select the battery test and press OK key to continue:

Battery Type: select your battery type, usually is “Regular Flooded”

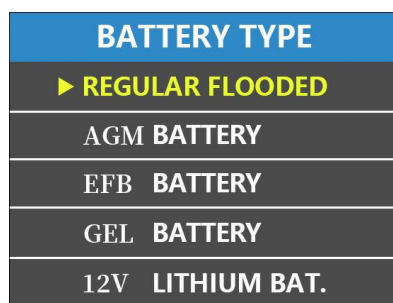

Input testing standard: the standard which you can see the front of the battery ,such as CCA、 BCI、 DIN. If you can't find any info about the standard, you can choose GB . Choose GB(Ah) standard would lead little tolerance.

Input rated capacity: you can see the starting current standards in front of the battery .Such as CCA/500A.

Then press OK key to start testing. You may get the testing result as following:

TEMPERATURE: 25°C			2023-03-31 15:35		
GOOD BATTERY					
HEALTHY	100%	530CCA			
CHARGE	100%	12.63V			
INTERNAL	R	5.66mΩ			
RATED	500 CCA				
PRESS ENTER TO PRINT RESULT					

Continue to press OK key, you can print the testing result directly.

Note:

For power loss battery (such as a vehicle for a long time on hold, the battery is not charged in time; forget to close the lights, the doors resulting in serious loss of battery electric vehicle and can not be started, etc.), in the actual testing process may also be prompted to "Please replace the battery," for such batteries, please consult the battery manufacturers, and then tested.


3.1.1 QR Code

After using the printing function, the QR code will appear on the interface. Scanning the QR code on your phone, you can view the results directly on your phone.

(Note: Recommend using Baidu or WeChat app to scan QR code.)




3.2 Cranking Test

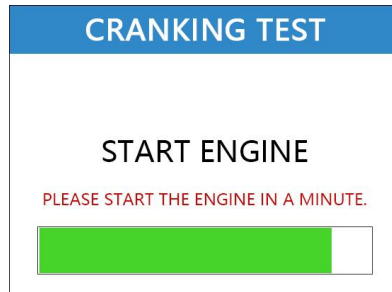


After entering the second start system test function ,the press OK key as following:Starting the engine as prompted, tester will automatically complete the cranking test and display the result.

Normally, cranking voltage value lower than 9.6V is regarded as abnormal and it is OK if it is higher than 9.6V. Test result of the tester includes actual cranking voltage and actual cranking time.

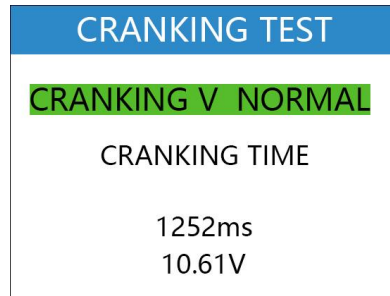

When cranking test is abnormal, battery test result will also be displayed at the same time. This is for the convenience of the maintenance personnel to quickly know the whole state of the starting system according to the data.

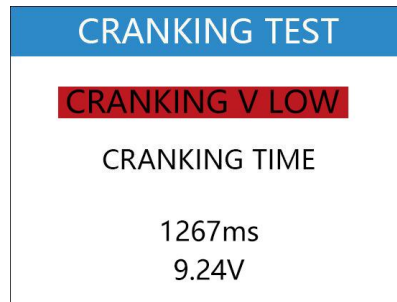


If the engine starting can't be detected, there may be no output of charging voltage, you need to check the generator.

After testing cranking system, press the OK button to print the test results directly .


3.3 Charging Test

When enter the charging test, tester will prompt "Loaded test"

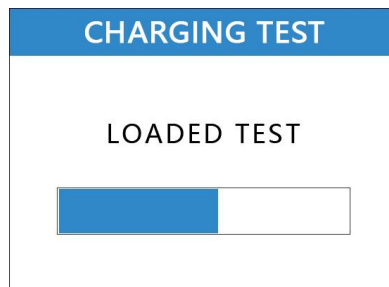


Note: Do not shut down the engine during the test. All electrical appliance and device are in OFF state. Turn on/off any electrical appliance in the vehicle during the test will affect the accuracy of the test result.

Operate accordingly to increase the engine rotating speed to 2500turns, and keep for 5 seconds.

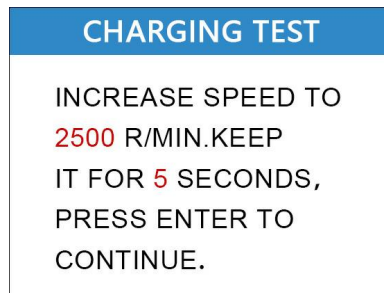

Tester starts the charging volt test after increase rev detected.

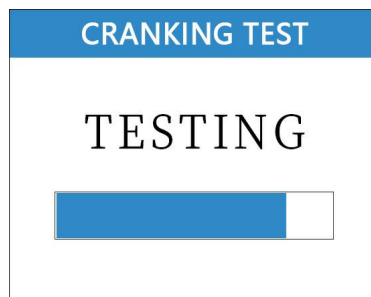

After the test finished, tester displays the effective charging volts, ripple test result and charging test result.

CHARGING TEST	
CHARGING V NORMAL	
LOADED V	13.89 V
UNLOADED V	13.93 V
PIPPLE V	15 m V
PIPPLE V	NORMAL

Check the connection between generator and battery, then retest.

After testing charging system, press the OK button to print the test results directly .

3.3.1 Charging Test Result

Charging Volt: Normal. The generator output normal, no problem detected.

Charging Volt: Low. Check drive belt of the generator whether slip or running off. Check the connection between generator and battery is normal or not. If both of the drive belt and the connection are in good condition, follow the manufacturer's suggestion to eliminate

generator fault.

Charging Volt: High. Since most of the vehicle generators are using internal regulator, the generator assembly has to be replaced.(Some old style cars are using external regulator, then directly replace the regulator.) The normal high volt of the voltage regulator is maximum $14.7 \pm 0.5V$.If charging volt is too high, it will overcharge the battery. Therefore, the battery life will be shortened and troubles will be caused.

No Volt Output.No generator, volt output is detected.Check the generator connection cable, the drive belt of generator and engine whether normal or not.

Diode Test: Through the test of charging current ripple, tester will find out whether the diode is normal or not. When ripple volt is too high, it proves at least one diode is damaged. Check and replace the diode.

3.4 Set up

After entering the forth function, then press OK key you can view the additional functions.

3.4.1 View Historical Data

Press OK key to view 20 groups previous testing result .

3.4.2 Export Data

After viewing the data, you can choose the export result function.

Download a serial port on the computer first . Using a USB cable to connect the tester and computer . Then open serial port on computer and press the OK key, you can view the data can be exported to the computer. (Contact our company to get the latest documents, you can export the data after download software)

TEMPERATURE: 21°C			2023-04-03	16:12
GOOD BATTERY				
HEALTHY	100%	770 CCA		
CHARGE	78%	12.47V		
INTERNAL	R	3.88mΩ		
RATED		500 CCA		
PRESS ENTER TO EXPORT RESULT				

3.4.3 Print Data

After viewing the data, you can chose to print the test results through pressing OK key . It's easy to print the recent results without testing again.

3.4.4 Delete Data

After reviewing the historical results, you can also choose to delete the data which you think are unsatisfactory results.

3.4.5 Select Language

This option is to let user select language.

1. European version: English, German, Italian, French, Polish, Russian, Swedish, Turkish, Slovak, Hungarian.
2. Asian version: English, Spanish, Portuguese, French, Traditional Chinese, Simplified Chinese, Japanese, Korean, Romania, Bulgaria.

3.4.6 Time Adjustment

This option is to adjust and check the system date and time.

Adjustment is in the sequence of Year, Month, Date, Hour, Minute. This adjustment sequence does not affect the date and time format.

3.5 QC Test

Quick testing is a direct detection based on the previous input standard. View test results with one click. Mainly used by battery wholesalers to view the results of the same batch of batteries. After viewing the results, you can also choose the printing function and receive a QR code.

Chapter 4 Warranty Clause

The warranty clause is only applicable to users and distributors who purchased Launch products via the regular process.

Within 1 year since the delivery, Launch guarantee the products damaged due to the material or craft defects. Any damage to the device or part due to abuse, unauthorized change, usage other than designed to, operation not following the user manual, etc. is out of the warranty. Compensation for the auto instrument damage due to the device defect is limited to repair or replacement, Launch is not responsible for any indirect or accidental loss. Launch will clarify the device damage according to the specified test method. Any distributor, employee and business representative of Launch are not entitled to do any confirmation, presentation or promise related to Launch products.

Statement of Disclaimer

The above warranty clause can substitute for any other form of warranty clauses.

Purchase Order

Replaceable parts and optional parts are available from Launch authorized suppliers.

Purchase order should include:

Order quantity

Part number

Part name

Customer Service Center

Any question during the operation, please call to 86-755-84528888 or 400-0666666.

For maintenance and repair, please send back to Launch with Warranty Card, Product Qualified Card, Purchase Invoice and problem description. Launch will maintain and repair the device for free when it is within the warranty. Otherwise, Launch will charge the maintenance and repair and the shipping

Launch address:

Shenzhen Launch Tech Co., Ltd,

Launch Industrial Park, North of Wuhe Avenue. Banxuegang, Longgang District, Shenzhen, P.R.China

Receiver: Customer Service Center Postcode: 518129

Launch website: <http://www.cnlaunch.com>

LAUNCH
www.cnlaunch.com